


WHAT'S IN THE BOX:

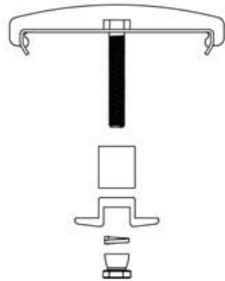





20X PANEL-LOCS

20X SPACERS

20X ALUMINIUM CENTER BLOCKS

20X WASHERS


20X SHEAR-NUTS

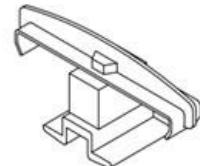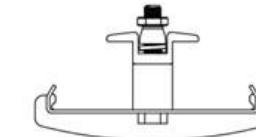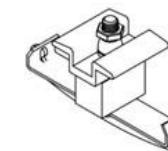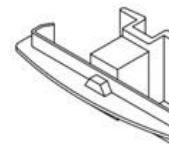

SECURING THE LOC ONTO YOUR PANELS STEP BY STEP:

1. REMOVE CONTENTS FROM PACKAGING
2. SLIDE THE PANEL-LOC BETWEEN THE TWO PANELS YOU ARE SECURING HOLDING THE BOLT
3. LIFT THE LOC UNTIL THE BASE TOUCHES THE SPACER ON THE PANELS, TURN 90°. THE PANEL-LOC WILL CLAMP ONTO THE PANEL FRAMES
4. MAKE SURE TO ADJUST THE SPACER TO THE CORRECT PANEL SIZE IE: 30MM/35MM/40MM
5. SLIDE THE ALUMINIUM CENTRE BLOCK ONTO THE BOLT, FIT IT BETWEEN THE PANELS IN THE SAME ORIENTATION AS THE EXISTING CENTRE CLAMPS
6. PLACE THE WASHER AND SHEAR-NUT ONTO THE BOLT, USING A SHIFTING SPANNER OR SOCKET TIGHTEN THE SHEAR-NUT UNTIL THE TOP BREAKS OFF.

YOUR PANELS ARE NOW PROTECTED AGAINST THEFT

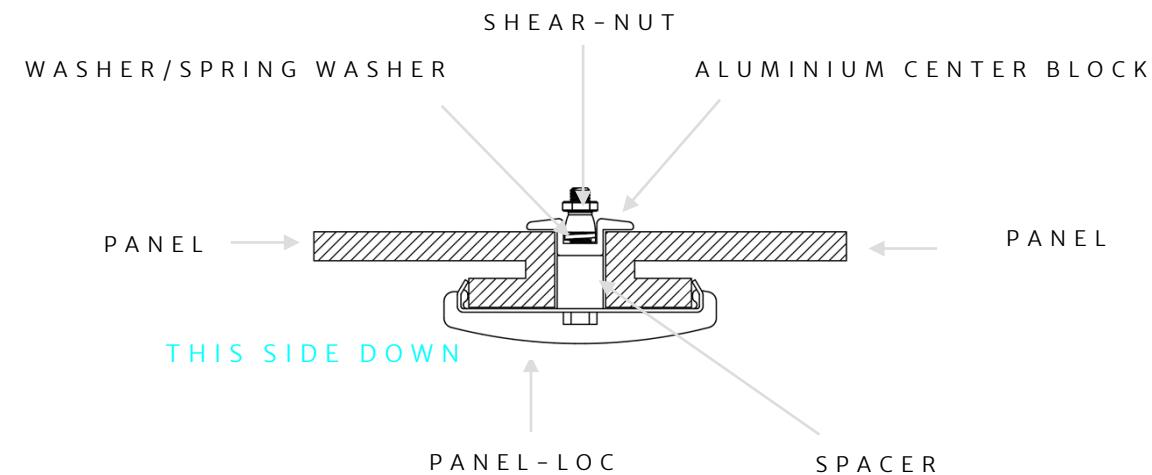

panel loc
SECURING SOLAR PANELS IN PLACE